

System Requirements for Cisco Unity Release 5.0

Revised July 14, 2008

This document lists requirements for installing a Cisco Unity system running version 5.0. It contains the following sections:

- Hardware Requirements, page 1
- Software Requirements, page 2
- Language Requirements for Third-Party Software, page 10
- Active Directory Requirements, page 12
- Network Requirements, page 12
- Requirements for Using Message Store Clustering, page 15
- Requirement for Domino Partitioning, page 16
- Requirements for Cisco Unity Failover, page 16
- Requirements for Standby Redundancy, page 20
- Requirements for Cisco Unity Phone View, page 23
- Requirements for Using 97 to 144 Voice Messaging Ports, page 23
- Requirements for the Cisco Unity Hospitality and Property Management System Integration, page 23
- Characteristics of Cisco Unity Configurations, page 24

Hardware Requirements

- Hardware Requirements—Cisco Unity Server, page 2
- Hardware Requirements—Cisco Unity Voice-Recognition Server, page 2



Hardware Requirements—Cisco Unity Server

• A server that meets Cisco Unity specifications. Refer to the *Cisco Unity Supported Platforms List* at http://www.cisco.com/en/US/products/sw/voicesw/ps2237/products_data_sheets_list.html.



Cisco TAC does not provide any assistance for installing, customizing, or troubleshooting Cisco Unity on a platform that is not on the Cisco Unity Supported Platforms List.

- Voice cards that are approved for use with Cisco Unity. (If you are integrating Cisco Unity with Cisco Unified Communications Manager, the integration does not require voice cards.) See the "Supported Voice Cards" and "Other Supported Phone System Integrations" sections in Supported Hardware and Software, and Support Policies for Cisco Unity Release 5.x at http://www.cisco.com/en/US/products/sw/voicesw/ps2237/prod_installation_guides_list.html.
 - If you are installing a Cisco Unity system outside the United States and you are connecting it directly to the central office by using an analog loop, you may need to install inline telco filters on the Intel Dialogic voice cards to filter tax impulse signals. For more information, refer to the Intel Dialogic documentation and regulatory notices that ship with the voice cards.
- The necessary cables, line splitters, and adapters to connect the voice cards to the phone system. For information about the cables and other components required for each type of circuit-switched phone system integration, see the "Other Supported Phone System Integrations" section in *Supported Hardware and Software, and Support Policies for Cisco Unity Release 5.x* at http://www.cisco.com/en/US/products/sw/voicesw/ps2237/prod_installation_guides_list.html.

If you are installing cards that have H.100 connectors, you need to connect the cards by using an H.100 cable that has at least as many connectors as you have cards (you must connect all cards by using a single cable) but no more than five extra connectors.

Hardware Requirements—Cisco Unity Voice-Recognition Server

• A server that meets Cisco Unity voice-recognition server specifications. Refer to the *Cisco Unity Supported Platforms List* at http://www.cisco.com/en/US/products/sw/voicesw/ps2237/products_data_sheets_list.html.



Cisco TAC does not provide any assistance for installing, customizing, or troubleshooting Cisco Unity voice-recognition software on a platform that is not listed on the *Cisco Unity Supported Platforms List* as supported for voice recognition.

Cisco Unity voice recognition is not supported for integrations with phone systems through voice cards. Subscribers with extensions on a phone system that is integrated to Cisco Unity through voice cards cannot use the voice recognition feature.

Software Requirements

- Software Requirements—Cisco Unity Server, page 3
- Software Requirements—Cisco Unity Voice-Recognition Server, page 5
- Software Requirements—Message Store, page 6

• Software Requirements—Subscriber Workstations, page 10

Note that if you plan to run Cisco Security Agent for Cisco Unity on the Cisco Unity server, some versions of required software are not supported. Refer to the "Software Requirements" section of Release Notes for Cisco Security Agent for Cisco Unity at

http://www.cisco.com/en/US/products/sw/voicesw/ps2237/prod_release_notes_list.html.

Software Requirements—Cisco Unity Server

Revised April 1, 2008

- A supported 32-bit version of Microsoft Windows Server 2003 or Windows 2000 Server:
 - Windows Server 2003 R2 Enterprise Edition

Supported for all Domino, Exchange 2007, and Exchange 2003 configurations. When Exchange 2000 is the message store, supported only when an Exchange Server 2003 server is available to be the partner Exchange server.

- Windows Server 2003 R2 Standard Edition

Supported for all Domino, Exchange 2007, and Exchange 2003 configurations. When Exchange 2000 is the message store, supported only when an Exchange Server 2003 server is available to be the partner Exchange server.

Windows Server 2003 Enterprise Edition

Supported for all Domino, Exchange 2007, and Exchange 2003 configurations. When Exchange 2000 is the message store, supported only when an Exchange Server 2003 server is available to be the partner Exchange server.

Windows Server 2003 Standard Edition

Supported for all Domino, Exchange 2007, and Exchange 2003 configurations. When Exchange 2000 is the message store, supported only when an Exchange Server 2003 server is available to be the partner Exchange server.

Windows 2000 Server

Supported only on selected servers. For more information, see the "Operating System" section of the *Cisco Unity Supported Platforms List* at http://www.cisco.com/en/US/products/sw/voicesw/ps2237/products data sheets list.html.

Windows 2000 Advanced Server

Supported only on selected servers. For more information, see the "Operating System" section of the *Cisco Unity Supported Platforms List* at http://www.cisco.com/en/US/products/sw/voicesw/ps2237/products_data_sheets_list.html.

These Windows versions are supported in English, French, German, and Japanese.



To use the Cisco Unity Server Updates wizard to install Microsoft updates for Windows, SQL Server 2000 or MSDE 2000, Internet Explorer, and Exchange, you must install the English-language version of those applications. If you install them in another language, you must download Microsoft updates from the Microsoft website.

The Cisco Unity Platform Configuration discs install Windows Server 2003 or Windows 2000 Server in English. The discs that install Windows Server 2003 also install the Microsoft Multilingual User Interface, so you can localize the Windows user interface into the languages supported for use with Cisco Unity.

Cisco Unity is not qualified for use on Windows 2000 Professional or Windows 2000 Datacenter Server.



If Windows Server 2003 is installed on the Cisco Unity server, voice cards and voice card software will not function correctly. Consequently, circuit-switched phone system integrations that use voice cards are not supported for use with a Cisco Unity server on which Windows Server 2003 is installed. Note, however, that IP integrations (Cisco Unified Communications Manager and SIP) and PIMG/TIMG integrations are supported for use with a Cisco Unity server on which Windows Server 2003 is installed. The list of phone systems supported for PIMG/TIMG integrations is revised as new phone systems are qualified.

- The applicable version of Microsoft SQL Server:
 - On a system with more than 32 voice ports, Microsoft SQL Server 2000 Standard Edition
 - On a system with 32 or fewer voice ports, Microsoft SQL Server 2000 Desktop Engine (MSDE 2000)

Other editions of SQL Server and MSDE are not supported.



A system that is using Cisco Unity failover requires SQL Server 2000 Standard Edition regardless of the number of voice ports. (See also "Requirements for Cisco Unity Failover" section on page 16.)

- Microsoft Internet Explorer 6.0
- MSXML 3.0
- Microsoft .NET Framework 1.1
- Business Objects Crystal Reports XI
- If you are integrating Cisco Unity with Cisco Unified Communications Manager or Cisco Unified Communications Manager Express by Skinny Call Control Protocol (SCCP), Cisco Unity-CM TSP version 8.2(1).
- Cisco Unity 5.0
- The service packs listed in the following section, "Minimum Service Packs Required—Cisco Unity Server"

Minimum Service Packs Required—Cisco Unity Server

- Windows Server 2003 Service Pack 1 (with Windows 2003 on the Cisco Unity server)
- Windows 2000 Server Service Pack 4 (with Windows 2000 on the Cisco Unity server)
- SQL Server 2000 Service Pack 4 (with SQL Server 2000 on the Cisco Unity server)
- MSDE 2000 Service Pack 4 (with MSDE 2000 on the Cisco Unity server)
- Internet Explorer 6.0 Service Pack 1 when the Cisco Unity server is running Windows 2000 Server Service Pack 4
- MSXML 3.0 Service Pack 1

We recommend that you also update the Cisco Unity server with the security updates that Microsoft releases monthly. Refer to *Software Installed by the Cisco Unity Server Updates Wizard* at http://www.cisco.com/en/US/products/sw/voicesw/ps2237/prod_installation_guides_list.html.

We strongly recommend that you update the Cisco Unity server with the service packs listed in the "Recommended Service Packs—Cisco Unity Server" section below. Some of the service packs may be more recent than the minimum required service packs listed here. If you do so, we recommend that you run the Cisco Unity Server Updates wizard to update the Cisco Unity server with the security updates that apply to the recommended service packs.

Recommended Service Packs—Cisco Unity Server

• Windows Server 2003 Service Pack 2 (with Windows 2003 on the Cisco Unity server). This service pack is available on Cisco Unity Service Packs DVD 1, with the minimum required service packs.

For support information, refer to the "Support Policy for Microsoft Service Packs and Updates" section of *Supported Hardware and Software*, and *Support Policies for Cisco Unity Release 5.x* at http://www.cisco.com/en/US/products/sw/voicesw/ps2237/prod_installation_guides_list.html.

Software Requirements—Cisco Unity Voice-Recognition Server

- A supported version of Microsoft Windows Server 2003:
 - Windows Server 2003 R2 Enterprise Edition
 - Windows Server 2003 R2 Standard Edition
 - Windows Server 2003 Enterprise Edition
 - Windows Server 2003 Standard Edition

On the voice-recognition server, Windows Server 2003 is supported only in English.



Voice-recognition software must be installed on a separate voice-recognition server. Installing the software on the Cisco Unity server is not supported.

- The service packs listed in the following section, "Minimum Service Pack Required—Cisco Unity Voice-Recognition Server."
- The G.711 Mu-Law audio format is required on the voice-recognition server and the phone system.



Voice recognition does not work if the voice-recognition server or the phone system is using G.729a, or if existing messages, greetings, and names were recorded in an audio format other than G.711 Mu-Law.

Minimum Service Pack Required—Cisco Unity Voice-Recognition Server

Windows Server 2003 Service Pack 1

We recommend that you also update the Cisco Unity voice-recognition server with the security updates that Microsoft releases monthly. Refer to *Software Installed by the Cisco Unity Server Updates Wizard* at http://www.cisco.com/en/US/products/sw/voicesw/ps2237/prod_installation_guides_list.html.

We strongly recommend that you update the Cisco Unity server with the service packs listed in the "Recommended Service Pack—Cisco Unity Voice-Recognition Server" section below. The service pack may be more recent than the minimum required service pack listed here. If you do so, we recommend that you run the Cisco Unity Server Updates wizard to update the Cisco Unity server with the security updates that apply to the recommended service pack.

Recommended Service Pack—Cisco Unity Voice-Recognition Server

• Windows Server 2003 Service Pack 2 (with Windows 2003 on the voice-recognition server)

For support information, refer to the "Support Policy for Microsoft Service Packs and Updates" section of *Supported Hardware and Software*, and *Support Policies for Cisco Unity Release 5.x* at http://www.cisco.com/en/US/products/sw/voicesw/ps2237/prod installation guides list.html.

Software Requirements—Message Store

IBM Lotus Domino and Microsoft Exchange are qualified for use as the message store with Cisco Unity 5.0. See the applicable section:

- Domino Requirements—Message Store, page 6
- Exchange Requirements—Message Store, page 7

Domino Requirements—Message Store

Revised July 14, 2008

Domino as the message store on a separate server is supported for Cisco Unity 5.0 installations configured for Unified Messaging or Voice Messaging, with the following required software:

- A supported version of IBM Lotus Notes on the Cisco Unity server. See Table 1 below.
- A supported version of IBM Lotus Domino Unified Communications (DUC) for Cisco on Domino servers (see Table 1 below), in addition to the following:
 - The server component of DUC for Cisco—csServer—is required on each Domino server that hosts a mail file or mail file replica that belongs to a Cisco Unity subscriber.
 - The Domino domain directory database must be updated with csAdmin, the administration component of DUC for Cisco.
- A supported version of Domino on Domino servers. See Table 1 below.
- A supported operating system version on Domino servers running DUC for Cisco. See Table 1 below.

Note that Cisco Unity does not ship with IBM Lotus server or client software. The software must be purchased from Cisco or from IBM Lotus.



Cisco assumes that the message store environment is already set up and working before the Cisco Unity system is installed.

Table 1 Supported Version Combinations of Required Software for Domino as the Message Store

Domino Versions	DUC for Cisco Versions on Domino Servers	Notes Versions on Cisco Unity Server	Operating Systems on Domino Servers Running DUC for Cisco
8.0.x (32-bit version only. DUC for Cisco does not support the 64-bit version of Domino 8.0.)	1.2.4	7.0 6.5.4 and later	IBM AIX 5.3 (64-bit kernel only) Windows Server 2003 (32-bit version only) Windows 2000 Server
7.0.x	1.2.4 1.2.3	7.0 6.5.x (Notes 6.5.4 or later is required when using DUC for Cisco 1.2.4.)	 When using DUC for Cisco 1.2.4: IBM AIX 5.3 (64-bit kernel only) Windows Server 2003 (32-bit version only) Windows 2000 Server When using DUC for Cisco 1.2.3: IBM AIX 5.3 (64-bit or 32-bit kernel) IBM AIX 5.2 (64-bit or 32-bit kernel) IBM AIX 5.1 (64-bit or 32-bit kernel) Windows Server 2003 (32-bit version only) Windows 2000 Server
6.5.x	1.2.4 (Supported for Domino version 6.5.4 and later only) 1.2.3	7.0 6.5.x (Notes 6.5.4 or later is required when using DUC for Cisco 1.2.4.)	 When using DUC for Cisco 1.2.4: IBM AIX 5.3 (64-bit kernel only) Windows Server 2003 (32-bit version only) Windows 2000 Server When using DUC for Cisco 1.2.3: IBM AIX 5.3 (64-bit or 32-bit kernel) IBM AIX 5.1 (64-bit or 32-bit kernel) IBM AIX 5.1 (64-bit or 32-bit kernel) Windows Server 2003 (32-bit version only) Windows 2000 Server

For additional Domino-related requirements, see:

- Active Directory Requirements, page 12
- Network Requirements, page 12
- Requirements for Using Message Store Clustering, page 15
- Requirement for Domino Partitioning, page 16

Exchange Requirements—Message Store

Revised May 16, 2008

Exchange as the message store is supported in the following Cisco Unity 5.0 configurations, with the required software listed below:

Unified Messaging	• Exchange 2007 on a separate server	
	Exchange 2003 on a separate server	
	Exchange 2000 on a separate server	
Voice Messaging	Exchange 2003 on the Cisco Unity server or on a separate server	
	• Exchange 2000 on the Cisco Unity server or on a separate server (Systems upgraded from Cisco Unity 4.x only. Exchange 2000 is not supported for new installations in a Voice Messaging configuration, either on the Cisco Unity server or on a separate server.)	

- A supported version of Microsoft Exchange Server:
 - Exchange Server 2007 Enterprise Edition
 - Exchange Server 2007 Standard Edition
 - Exchange Server 2003 Enterprise Edition
 - Exchange Server 2003 Standard Edition
 - Voice Mail Run-Time Edition of Microsoft Exchange Server 2003 Enterprise Edition
 Cisco Unity ships with this version, only for use in the Voice Messaging configuration.
 - Exchange 2000 Server Enterprise Edition

In a Unified Messaging configuration, supported for all new 5.x installations and upgrades. In a Voice Messaging configuration, supported only for systems upgraded from Cisco Unity 4.x. When Windows Server 2003 is installed on the Cisco Unity server, Exchange 2000 is supported as the message store only when an Exchange Server 2003 server is available to be the partner Exchange server.

- Exchange 2000 Server Standard Edition

In a Unified Messaging configuration, supported for all new 5.x installations and upgrades. In a Voice Messaging configuration, supported only for systems upgraded from Cisco Unity 4.x. When Windows Server 2003 is installed on the Cisco Unity server, Exchange 2000 is supported as the message store only when an Exchange Server 2003 server is available to be the partner Exchange server.

- Voice Mail Run-Time Edition of Microsoft Exchange 2000 Server Enterprise Edition Cisco Unity ships with this version, only for use in the Voice Messaging configuration on systems upgraded from Cisco Unity 4.x. When Windows Server 2003 is installed on the Cisco Unity server, Exchange 2000 is supported as the message store only when an Exchange Server 2003 server is available to be the partner Exchange server.
- Exchange 2000 Conferencing Server

Supported only in the Unified Messaging configuration on systems upgraded from Cisco Unity 4.x. When Windows Server 2003 is installed on the Cisco Unity server, Exchange 2000 is supported as the message store only when an Exchange Server 2003 server is available to be the partner Exchange server.

Customers are responsible for providing their own copy of Exchange unless they are using the Voice Mail Run-Time Edition of either Exchange 2003 or Exchange 2000, both of which ship with Cisco Unity.

If subscribers will be homed in Exchange 2007 and:

- if you will be creating Cisco Unity Trusted Internet subscribers, or
- if you will be using AMIS, the Cisco Unity Bridge, or VPIM to integrate Cisco Unity with another voice-messaging system,

you must retain an Exchange 2000 or an Exchange 2003 server in the forest for the Cisco Unity Voice Connector for Microsoft Exchange. A version of the Voice Connector is not currently available for Exchange 2007.

When failover is configured and Cisco Unity is configured as Unified Messaging, Exchange must be installed on a separate server from the primary and secondary servers. You can use any supported version of Exchange (except the Voice Mail Run-Time Editions) for the message store.

When failover is configured and Cisco Unity is configured as Voice Messaging, you can install Exchange either on a separate server from the primary and secondary servers or on the secondary server. Note the following:

- If you install Exchange on a separate server, you can install any supported version of Exchange.
- If you install Exchange on the secondary server, you must install Exchange Server 2003. In addition, there is a lower limit on the number of Cisco Unity subscribers. For information on the maximum number of subscribers supported in this configuration, refer to the Cisco Unity Supported Platforms List at

http://www.cisco.com/en/US/products/sw/voicesw/ps2237/products_data_sheets_list.html.

See also the "Requirements for Cisco Unity Failover" section on page 16.

- Client Access Licenses (CALs) must be purchased for all configurations except Cisco Unity Voice Messaging with the Voice Mail Run-Time Edition of either Exchange 2003 or Exchange 2000.
- The service packs listed in the following section, "Minimum Service Packs Required—Message Store." For information on installing Exchange service packs on servers other that the Cisco Unity server, refer to the Microsoft website.

Minimum Service Packs Required—Message Store

- Exchange 2003 Service Pack 2 (when Exchange 2003 is being used)
- Exchange 2000 Service Pack 3 (when Exchange 2000 is being used)
- Exchange 2000 Post-Service Pack 3 Update Rollup (when Exchange 2000 is being used) (described in Microsoft Knowledge Base article 870540). The rollup is automatically installed when you run the Cisco Unity Server Updates wizard and choose to install Microsoft updates for Exchange.

We recommend that you update the Cisco Unity server and/or message store servers, as applicable, with the Exchange service packs listed in the "Recommended Service Packs—Message Store" section below. Some of the service packs may be more recent than the minimum required service packs listed in this section. In addition, we recommend that you update the Cisco Unity server with the security updates that Microsoft releases monthly. Refer to *Software Installed by the Cisco Unity Server Updates Wizard* at http://www.cisco.com/en/US/products/sw/voicesw/ps2237/prod_installation_guides_list.html.

Recommended Service Packs—Message Store

• Exchange 2007 Service Pack 1

For support information, refer to the "Support Policy for Microsoft Service Packs and Updates" section of *Supported Hardware and Software*, and *Support Policies for Cisco Unity Release 5.x* at http://www.cisco.com/en/US/products/sw/voicesw/ps2237/prod_installation_guides_list.html.



For Cisco Unity configurations with Exchange installed on a separate server, Cisco assumes that the message store environment is already set up and working before the Cisco Unity system is installed.

For additional Exchange-related requirements, see:

- Active Directory Requirements, page 12
- Network Requirements, page 12
- Requirements for Using Message Store Clustering, page 15

Software Requirements—Subscriber Workstations

- An operating system that is compatible with the version of Cisco Unity that you are installing. Refer
 to Compatibility Matrix: Cisco Unity and the Software on Subscriber Workstations at
 http://www.cisco.com/en/US/products/sw/voicesw/ps2237/products_device_support_tables_list.ht
 ml. A compatible operating system is required:
 - For installing the Cisco Unity server in a Unified Messaging configuration and for subscribers to access voice messages by using Cisco Unity ViewMail for Microsoft Outlook and Lotus Notes with DUC for Cisco.
 - For subscribers to access the Cisco Personal Communications Assistant (PCA). (Subscribers have access to the Cisco Unity Assistant and the Cisco Unity Inbox through the Cisco PCA.)
- A messaging client that is compatible with the version of Cisco Unity that you are installing. Refer
 to Compatibility Matrix: Cisco Unity and the Software on Subscriber Workstations at
 http://www.cisco.com/en/US/products/sw/voicesw/ps2237/products_device_support_tables_list.ht
 ml. A compatible messaging client is required for installing the Cisco Unity server in a Unified
 Messaging configuration and for subscribers to access voice messages by using ViewMail for
 Outlook and Lotus Notes with DUC for Cisco.
- An Internet browser that is compatible with the version of Cisco Unity that you are installing. Refer to *Compatibility Matrix: Cisco Unity and the Software on Subscriber Workstations* at http://www.cisco.com/en/US/products/sw/voicesw/ps2237/products_device_support_tables_list.html. A compatible browser is required for subscribers to access the Cisco PCA.

Language Requirements for Third-Party Software

Required languages for the applications listed in the "List of Third-Party Software" section on page 11 depend on the Windows locale on the Cisco Unity server.



To use the Cisco Unity Server Updates wizard to install Microsoft updates for Windows, SQL Server 2000 or MSDE 2000, Internet Explorer, and Exchange, you must install the English-language version of those applications. If you install them in another language, you must download Microsoft updates from the Microsoft website.

Table 2 lists the required languages for French, German, Japanese, and U.S. English locales. For locales not listed in the table, U.S. English versions are required for all software.

Note that the locale on the Cisco Unity server must match one of the installed Cisco Unity languages (for example, if you choose French as the locale, then the French Cisco Unity system-prompt set must also be installed).

Table 2 Required Languages for Third-Party Software

Windows Locale on Cisco Unity Server	Required Language for Third-Party Software		
French	French versions are required for all software (see the "List of Third-Party Software" section on page 11) except the following four applications:		
	• IBM Lotus Domino Unified Communications (DUC) for Cisco—French or U.S. English is required.		
	Microsoft MSXML—U.S. English is required.		
	Microsoft MDAC—U.S. English is required.		
German	German versions are required for all software (see the "List of Third-Party Software" section on page 11) except the following four applications:		
	• IBM Lotus Domino Unified Communications (DUC) for Cisco—German or U.S. English is required.		
	Microsoft MSXML—U.S. English is required.		
	Microsoft MDAC—U.S. English is required.		
Japanese	Japanese versions are required for all software (see the "List of Third-Party Software" section on page 11) except the following four applications:		
	• IBM Lotus Domino Unified Communications (DUC) for Cisco—Japanese or U.S. English is required.		
	Microsoft MSXML—U.S. English is required.		
	Microsoft MDAC—U.S. English is required.		
U.S. English	U.S. English versions are required for all software (see the "List of Third-Party Software" section on page 11).		
Locales not listed in this table	U.S. English versions are required for all software (see the "List of Third-Party Software" section on page 11).		

List of Third-Party Software

Depending on the Windows locale on the Cisco Unity server, the following software must be installed in the languages listed in Table 2:

- Cisco Unity ViewMail for Microsoft Outlook
- IBM Lotus Domino
- IBM Lotus Domino Unified Communications (DUC) for Cisco
- IBM Lotus Notes
- Microsoft Exchange
- Microsoft Internet Explorer
- Microsoft MDAC
- Microsoft MSXML

- Microsoft Outlook
- Microsoft SQL Server or MSDE
- · Microsoft Windows

Active Directory Requirements

See the applicable section:

- Active Directory Requirements—Cisco Unity Unified Messaging, page 12
- Active Directory Requirements—Cisco Unity Voice Messaging, page 12
- Active Directory Requirements—Cisco Unity Voice-Recognition Server, page 12

(For information on the characteristics of the Unified Messaging and Voice Messaging configurations, see the "Characteristics of Cisco Unity Configurations" section on page 24.)

Active Directory Requirements—Cisco Unity Unified Messaging

Revised April 1, 2008

The Cisco Unity server typically is a member server in an Active Directory 2003 or Active Directory 2000 domain. All domain and forest functional levels are supported, including the levels formerly known as mixed mode and native mode.

When Exchange is the message store, mailboxes for Cisco Unity subscribers can be homed on Exchange servers in any domain in the forest.

Active Directory Requirements—Cisco Unity Voice Messaging

Revised April 1, 2008

The Cisco Unity server is a domain controller/global catalog server (DC/GC) in its own Active Directory 2003 or Active Directory 2000 domain, or is a member server in an existing Active Directory 2003 or Active Directory 2000 domain. All domain and forest functional levels are supported, including the levels formerly known as mixed mode and native mode.

When Exchange is the message store, mailboxes for Cisco Unity subscribers can be homed on Exchange servers in any domain in the forest.

Active Directory Requirements—Cisco Unity Voice-Recognition Server

The Cisco Unity voice-recognition server is a workgroup server or is a member server in the same domain as the Cisco Unity server. Making the voice-recognition server a domain controller or global catalog server is not supported.

Network Requirements

See the applicable section:

• Network Requirements—Cisco Unity Unified Messaging, page 13

• Network Requirements—Cisco Unity Voice Messaging, page 14

(For information on the characteristics of the Unified Messaging and Voice Messaging configurations, see the "Characteristics of Cisco Unity Configurations" section on page 24.)

Network Requirements—Cisco Unity Unified Messaging

Revised May 6, 2008

The Cisco Unity server must be connected to the network, so it has access to the message store, the directory, and network utilities.

- Recommended minimum 100 Mbps connection.
- Note the following firewall-configuration issues:

When IBM Lotus Domino is the message store, the Cisco Unity server cannot be separated by a firewall from:

- Domino servers on which mailboxes for Cisco Unity subscribers are homed.
- The Domino server that Cisco Unity monitors for changes to the directory.
- The Domino Server to which Cisco Unity sends voice messages. (This is the Domino server that the installer specifies while installing IBM Lotus Notes on the Cisco Unity server. Cisco Unity delivers all voice messages to Mail.box on this server for routing.)
- The domain controller on which the Cisco Unity installation and services accounts are created.

When Microsoft Exchange is the message store, the Cisco Unity server cannot be separated by a firewall from:

- The partner Exchange server.
- The domain controller that Cisco Unity monitors for directory updates.
- The global catalog server that Cisco Unity monitors for directory updates.
- The global catalog server with which the Cisco Unity MAPI client communicates.

In addition, the partner Exchange server cannot be separated by a firewall from the domain controllers and the global catalog server that the partner server communicates with.

The Cisco Unity server cannot be separated by a firewall from a Cisco Unity voice-recognition server.

For details on the TCP/UDP ports that must be opened in a firewall to allow communication between Cisco Unity and other servers, refer to the "IP Communications Required by Cisco Unity" chapter in the Security Guide for Cisco Unity at

http://www.cisco.com/en/US/products/sw/voicesw/ps2237/prod_maintenance_guides_list.html.

The Cisco Unity server must be connected to the servers listed below over a high-speed IP network
with minimal propagation delay and with proper Quality of Service guarantees for traffic between
the components.

When Domino is the message store:

- The Domino server that Cisco Unity uses for importing subscribers and lists from the primary subscriber address book, and that it monitors for changes to the Domino directory.
- The Domino Server to which Cisco Unity sends voice messages.
- Any Domino server on which Cisco Unity subscriber mailboxes are homed.

When Exchange is the message store:

- The partner Exchange server.
- Any Exchange server on which Cisco Unity subscriber mailboxes are homed.
- The domain controller that Cisco Unity monitors for directory updates.
- The global catalog server that Cisco Unity monitors for directory updates.
- The global catalog server with which the Cisco Unity MAPI client communicates.
- If the Cisco Unity server contains a dual NIC, the two NICs must be configured for fault tolerance
 using a single IP address, or one of the NICs must be disabled. Configuring the two NICs with
 distinct IP addresses for network load balancing is not supported.
- If Cisco Unity connects to Media Gateway units (PIMG or TIMG) over a WAN, the requirements for the WAN network connection are:
 - For G.729a codec formatting, a minimum of 32.76 Kbps guaranteed bandwidth for each voice messaging port.
 - For G.711 codec formatting, a minimum of 91.56 Kbps guaranteed bandwidth for each voice messaging port.
 - No network devices that implement network address translation (NAT).

Network Requirements—Cisco Unity Voice Messaging

Revised May 6, 2008

The Cisco Unity server must be connected to the network for most Voice Messaging configurations so that it has access to the message store, the directory, and network utilities. The only exception is when Exchange 2003 or Exchange 2000 is installed on the Cisco Unity server, the Cisco Unity server is a domain controller/global catalog server in its own forest, failover is not configured, and Cisco Unity is integrated with the phone system by using voice cards; in that configuration, a network connection is not required.

- Minimum 10 Mbps with minimal network access, if any.
- Note the following firewall-configuration issues:

When IBM Lotus Domino is the message store, the Cisco Unity server cannot be separated by a firewall from:

- Domino servers on which mailboxes for Cisco Unity subscribers are homed.
- The Domino server that Cisco Unity monitors for changes to the directory.
- The Domino Server to which Cisco Unity sends voice messages. (This is the Domino server that the installer specifies while installing IBM Lotus Notes on the Cisco Unity server. Cisco Unity delivers all voice messages to Mail.box on this server for routing.)
- The domain controller on which the Cisco Unity installation and services accounts are created.

When Microsoft Exchange is the message store, the Cisco Unity server cannot be separated by a firewall from:

- The partner Exchange server.
- The domain controller that Cisco Unity monitors for directory updates.
- The global catalog server that Cisco Unity monitors for directory updates.
- The global catalog server with which the Cisco Unity MAPI client communicates.

In addition, the partner Exchange server cannot be separated by a firewall from the domain controllers and the global catalog server that the partner server communicates with.

The Cisco Unity server cannot be separated by a firewall from a Cisco Unity voice-recognition server.

For details on the TCP/UDP ports that must be opened in a firewall to allow communication between Cisco Unity and other servers, refer to the "IP Communications Required by Cisco Unity" chapter in the Security Guide for Cisco Unity at

http://www.cisco.com/en/US/products/sw/voicesw/ps2237/prod_maintenance_guides_list.html.

The Cisco Unity server must be connected to the servers listed below over a high-speed IP network
with minimal propagation delay and with proper Quality of Service guarantees for traffic between
the components.

When Domino is the message store:

- The Domino server that Cisco Unity uses for importing subscribers and lists from the primary subscriber address book, and that it monitors for changes to the Domino directory.
- The Domino Server to which Cisco Unity sends voice messages.
- Any Domino server on which Cisco Unity subscriber mailboxes are homed.

When Exchange is the message store:

- The partner Exchange server.
- Any Exchange server on which Cisco Unity subscriber mailboxes are homed.
- The domain controller that Cisco Unity monitors for directory updates.
- The global catalog server that Cisco Unity monitors for directory updates.
- The global catalog server with which the Cisco Unity MAPI client communicates.
- If the Cisco Unity server contains a dual NIC, the two NICs must be configured for fault tolerance
 using a single IP address, or one of the NICs must be disabled. Configuring the two NICs with
 distinct IP addresses for network load balancing is not supported.
- If Cisco Unity connects to Media Gateway units (PIMG or TIMG) over a WAN, the requirements for the WAN network connections are:
 - For G.729a codec formatting, a minimum of 32.76 Kbps guaranteed bandwidth for each voice messaging port.
 - For G.711 codec formatting, a minimum of 91.56 Kbps guaranteed bandwidth for each voice messaging port.
 - No network devices that implement network address translation (NAT).

Requirements for Using Message Store Clustering

See the applicable section:

- Domino Requirements—Message Store Clustering, page 15
- Exchange Requirements—Message Store Clustering, page 16

Domino Requirements—Message Store Clustering

• Clustering on the same Domino server or on separate Domino servers is supported. (Clustering on the same Domino server assumes that you are using Domino partitioning. See also the "Requirement for Domino Partitioning" section on page 16.)

- Each clustered server must have a replica of each Cisco Unity subscriber's mail file.
- You must install csServer, the server component of IBM Lotus Domino Unified Communications (DUC) for Cisco, on each clustered server.

Exchange Requirements—Message Store Clustering

Revised May 16, 2008

When mailboxes for Cisco Unity subscribers will be homed in an Exchange cluster:

- The following Exchange 2007 high-availability features are supported.
 - Single Copy Cluster (SCC)
 - Cluster Continuous Replication (CCR)
 - Local Continuous Replication (LCR)

Standby Continuous Replication (SCR) is not supported.

- Exchange 2003 clustering is supported.
- Exchange 2000 clustering is supported.
- Do not install Cisco Unity on a server in an Exchange cluster.
- Do not install a Cisco Unity Voice Connector for Microsoft Exchange on a server in an Exchange cluster.
- When homing mailboxes for Cisco Unity subscribers on clustered Exchange servers, choose as the
 partner Exchange server either an Exchange server outside the cluster or the Exchange virtual server
 in the cluster.

Clustered Exchange servers require special hardware that Cisco does not provide and advanced knowledge of Windows and of Exchange clustering. Cisco will not help with configuration or support of the Exchange cluster; it is the responsibility of the customer to obtain support for the Exchange cluster.

Requirement for Domino Partitioning

Each partition must have its own IP address. For information on configuring and using Domino partitioning, refer to the IBM Domino documentation.

Requirements for Cisco Unity Failover

See the applicable section:

- Failover Requirements When the Message Store Is Installed on a Separate Platform, page 17
- Failover Requirements When the Message Store Is Installed on the Secondary Cisco Unity Server, page 18
- Failover Requirements for Separating Cisco Unity Servers by a Firewall, page 19
- Failover Requirement for Separating the Cisco Unity Servers from a Voice-Recognition Server by a Firewall, page 19
- Failover Requirements for Separating Cisco Unity Servers by a WAN, page 19



For standby redundancy requirements, see the "Requirements for Standby Redundancy" section on page 20.

Failover Requirements When the Message Store Is Installed on a Separate Platform

- Both Cisco Unity servers must appear on the *Cisco Unity Supported Platforms List* at http://www.cisco.com/en/US/products/sw/voicesw/ps2237/products_data_sheets_list.html and must belong to the same platform overlay.
- The network must meet the requirements listed in the "Network Requirements" section on page 12.
- One Cisco Unity server is designated the primary server, and the other Cisco Unity server is designated the secondary server.
- Both Cisco Unity servers must be member servers in the same Active Directory domain. Do not install Active Directory on either Cisco Unity server.
- When servers are installed in different locations, each location must have a domain controller/global catalog server.
- The names of both Cisco Unity servers must be unique in the first 14 characters.
- Both Cisco Unity servers must communicate with the same message store server.
- When Exchange is the message store, Exchange administration software must be installed on the primary and secondary servers. Exchange Server must be installed on computers other than the Cisco Unity servers.
- When IBM Lotus Domino is the message store, Lotus Notes must be installed on both Cisco Unity servers. All other IBM Lotus software must be installed on computers other than the Cisco Unity servers.
- Both Cisco Unity servers must connect to the same phone system.
- Both Cisco Unity servers must have the same enabled features and configurations.
- SQL Server 2000 Standard Edition must be installed on both the primary and secondary servers. (MSDE 2000 is not supported on either server with Cisco Unity failover.)
- Cisco Unity and SQL Server 2000 must log on with the same domain account on both the primary and secondary servers.
- MSSQLSERVER and SQLSERVERAGENT services on both Cisco Unity servers must be
 configured to log on as the same domain account, and the account must belong to the Local
 Administrators group on each server. SQLSERVERAGENT on the primary server must be able to
 log on to SQL Server on the secondary server by using Windows NT authentication.
- All software must be installed on the same drive and directories for both primary and secondary servers.

Failover Requirements When the Message Store Is Installed on the Secondary Cisco Unity Server



If the message store is already installed on a separate platform, do not reconfigure the existing Cisco Unity failover system to move Exchange to the secondary Cisco Unity server. Otherwise, the Cisco Unity failover system will not be supported. Only new installations of Cisco Unity with failover can be configured with Exchange on the secondary server.

- Both Cisco Unity servers must appear on the Cisco Unity Supported Platforms List at http://www.cisco.com/en/US/products/sw/voicesw/ps2237/products_data_sheets_list.html and must belong to the same platform overlay.
- The network must meet the requirements listed in the "Network Requirements" section on page 12.
- One Cisco Unity server is designated the primary server, and the other Cisco Unity server is designated the secondary server.
- For the Active Directory domain, you must use one of the following configurations:
 - Both Cisco Unity servers are member servers in the same Active Directory domain.
 - The secondary server is a domain controller and the primary server is a member server in the secondary server domain.
- When servers are installed in different locations, each location must have a domain controller/global catalog server.
- The names of both Cisco Unity servers must be unique in the first 14 characters.
- Both Cisco Unity servers must communicate with the same message store server.
- Exchange Server 2003 administration software must be installed on the primary server.
- Exchange Server 2003 must be installed on the secondary server.
- Both Cisco Unity servers must connect to the same phone system.
- Both Cisco Unity servers must have the same enabled features and configurations.
- Cisco Unity must be configured as Voice Messaging. For information on the maximum number of subscribers supported in this configuration, refer to the *Cisco Unity Supported Platforms List* at http://www.cisco.com/en/US/products/sw/voicesw/ps2237/products_data_sheets_list.html.
- SQL Server 2000 Standard Edition must be installed on both the primary and secondary servers. (MSDE 2000 is not supported on either server with Cisco Unity failover.)
- Cisco Unity and SQL Server 2000 must log on with the same domain account on both the primary and secondary servers.
- MSSQLSERVER and SQLSERVERAGENT services on both Cisco Unity servers must be configured to log on as the same domain account, and the account must belong to the Local Administrators group on each server. SQLSERVERAGENT on the primary server must be able to log on to SQL Server on the secondary server by using Windows NT authentication.
- All software must be installed on the same drive and directories for both primary and secondary servers.

Failover Requirements for Separating Cisco Unity Servers by a Firewall

Revised April 21, 2008

• The message store must be Exchange.



When IBM Lotus Domino is the message store, Cisco Unity servers cannot be separated by a firewall from one another, from Domino message store servers, or from the domain controller on which the Cisco Unity installation and services accounts were created. Otherwise, Cisco Unity may not function correctly.

- The network must meet the requirements listed in the "Network Requirements" section on page 12.
- Exchange cannot be installed on the secondary server.
- The primary server must not be separated by a firewall from:
 - The partner Exchange server.
 - The domain controller that Cisco Unity monitors for directory updates.
 - The global catalog server that Cisco Unity monitors for directory updates.
 - The global catalog server with which the Cisco Unity MAPI client communicates.
- The partner Exchange server cannot be separated by a firewall from the domain controllers and the global catalog server that the partner server communicates with.
- Cisco Unity failover was designed with the expectation that the primary server would generally be the active server. The secondary server must be used as the active server only for brief periods. The problem with the primary server must be resolved promptly, and the primary server must be made the active server again at the earliest opportunity.
- When separating the Cisco Unity primary or secondary servers from one another or from other servers by a firewall, the applicable TCP and UDP ports must be open in the firewall. For details on the TCP/UDP ports used by Cisco Unity and other servers, refer to the "IP Communications Required by Cisco Unity" chapter in the *Security Guide for Cisco Unity* at http://www.cisco.com/en/US/products/sw/voicesw/ps2237/prod_maintenance_guides_list.html.

Failover Requirement for Separating the Cisco Unity Servers from a Voice-Recognition Server by a Firewall

The Cisco Unity servers must be on the same side of a firewall as a Cisco Unity voice-recognition server.

Failover Requirements for Separating Cisco Unity Servers by a WAN

Revised April 21, 2008

- There must be two paths of connectivity between the Cisco Unity servers.
- Each path of connectivity must be gigabit speed or higher with no stead-state congestion.
- The maximum round-trip latency must be no more than 10 ms. A fixed network latency of 5ms or less is a best practice.
- The Cisco Unity servers must not be separated by a firewall.

- When Microsoft Exchange is the message store, the Cisco Unity servers cannot be separated by a firewall from:
 - The partner Exchange server.
 - The domain controller that Cisco Unity monitors for directory updates.
 - The global catalog server that Cisco Unity monitors for directory updates.
 - The global catalog server with which the Cisco Unity MAPI client communicates.
- The partner Exchange server cannot be separated by a firewall from the domain controllers and the global catalog server that the partner server communicates with.
- When IBM Lotus Domino is the message store, the Cisco Unity servers cannot be separated by a firewall from:
 - One another.
 - Domino message store servers.
 - The domain controller on which the Cisco Unity installation and services accounts were created.
- When separating the Cisco Unity servers from other servers by a firewall, the applicable TCP and UDP ports must be open in the firewall. For details on the TCP/UDP ports used by Cisco Unity and other servers, see the "IP Communications Required by Cisco Unity" chapter in the Security Guide for Cisco Unity 5.x at

http://www.cisco.com/en/US/products/sw/voicesw/ps2237/prod_maintenance_guides_list.html.

Requirements for Standby Redundancy



For the failover requirements, see the "Requirements for Cisco Unity Failover" section on page 16.

See the applicable section:

- Standby Redundancy Requirements When the Message Store Is Installed on a Separate Platform, page 20
- Standby Redundancy Requirements When Exchange Server 2003 Is Installed on the Primary Cisco Unity Server, page 21
- Standby Redundancy Requirements for Separating Cisco Unity Servers by a Firewall, page 22

Standby Redundancy Requirements When the Message Store Is Installed on a Separate Platform

- Both Cisco Unity servers must appear on the *Cisco Unity Supported Platforms List* at http://www.cisco.com/en/US/products/sw/voicesw/ps2237/products_data_sheets_list.html and must belong to the same platform overlay.
- There must be a connection of 100 Mbps between the primary and secondary Cisco Unity servers.
- The network must meet the requirements listed in the "Network Requirements" section on page 12.
- One Cisco Unity server is designated the primary server, and the other Cisco Unity server is designated the secondary (or standby) server.

- Both Cisco Unity servers must be member servers in the same Active Directory domain. Do not install Active Directory on either Cisco Unity server.
- The names of both Cisco Unity servers must be unique in the first 14 characters.
- Both Cisco Unity servers must communicate with the same message store server.
- When Exchange is the message store:
 - Exchange administration software must be installed on the primary and secondary servers.
 - Exchange Server must be installed on computers other than the Cisco Unity servers.
 - The primary Cisco Unity server must be located in the same LAN as the partner Exchange server.
- When IBM Lotus Domino is the message store, Lotus Notes must be installed on both Cisco Unity servers. All other IBM Lotus software must be installed on computers other than the Cisco Unity servers.
- Both Cisco Unity servers must connect to the same phone system.
- Both Cisco Unity servers must have the same enabled features and configurations.
- SQL Server 2000 Standard Edition must be installed on both the primary and secondary servers. (MSDE 2000 is not supported on either server with Cisco Unity standby redundancy.)
- Cisco Unity and SQL Server 2000 must log on with the same domain account on both the primary and secondary servers.
- MSSQLSERVER and SQLSERVERAGENT services on both Cisco Unity servers must be
 configured to log on as the same domain account, and the account must belong to the Local
 Administrators group on each server. SQLSERVERAGENT on the primary server must be able to
 log on to SQL Server on the secondary server by using Windows NT authentication.
- All software must be installed on the same drive and directories for both primary and secondary servers.
- The Cisco Unity servers must have Cisco Unity 5.0(1) ES1 installed.

Standby Redundancy Requirements When Exchange Server 2003 Is Installed on the Primary Cisco Unity Server



If the message store is already installed on a separate platform, do not reconfigure the existing Cisco Unity system to move Exchange to the primary Cisco Unity server. Otherwise, the Cisco Unity standby redundancy system will not be supported. Only new installations of Cisco Unity with standby redundancy can be configured with Exchange on the primary server.

- This configuration is supported only when Cisco Unity is installed in a Voice Messaging configuration.
- One Cisco Unity server is designated the primary server, and the other Cisco Unity server is designated the secondary (or standby) server.
- Both Cisco Unity servers must appear on the *Cisco Unity Supported Platforms List* at http://www.cisco.com/en/US/products/sw/voicesw/ps2237/products_data_sheets_list.html and must belong to the same platform overlay.
- There must be a connection of 100 Mbps between the primary and secondary Cisco Unity servers.

- The network must meet the requirements listed in the "Network Requirements" section on page 12.
- If the Cisco Unity servers are being installed into an existing forest, both data centers must have one or more DC/GCs and one or more DNS servers.
 - If the Cisco Unity servers are being installed into a new forest, both must be DC/GCs in the same Active Directory domain.
- The names of both Cisco Unity servers must be 14 characters or shorter.
- Exchange Server 2003 administration must be installed on the secondary server.
- Both Cisco Unity servers must have the same enabled features and configurations.
- SQL Server 2000 Standard Edition must be installed on both Cisco Unity servers. (MSDE 2000 is not supported on either server with Cisco Unity standby redundancy.)
- The SQL Server 2000 services MSSQLSERVER and SQLSERVERAGENT on both Cisco Unity servers must be configured to log on as the same domain account, and the account must belong to the Local Administrators group on each server. SQLSERVERAGENT on the primary server must be able to log on to SQL Server on the secondary server by using Windows NT authentication.
- All software must be installed on the same drive and directories for both Cisco Unity servers.
- The Cisco Unity servers must have Cisco Unity 5.0(1) ES1 installed.

Standby Redundancy Requirements for Separating Cisco Unity Servers by a Firewall

Added April 21, 2008

The message store must be Exchange.



Caution

When IBM Lotus Domino is the message store, do not separate Cisco Unity servers by a firewall from one another, from Domino message store servers, or from the domain controller on which the Cisco Unity installation and services accounts were created. Otherwise, Cisco Unity may not function correctly.

- The network must meet the requirements listed in the "Network Requirements" section.
- The primary server must be on the same side of the firewall as:
 - The partner Exchange server.
 - The domain controller that Cisco Unity monitors for directory updates.
 - The global catalog server that Cisco Unity monitors for directory updates.
 - The global catalog server with which the Cisco Unity MAPI client communicates.
- The partner Exchange server cannot be separated by a firewall from the domain controllers and the global catalog server that the partner server communicates with.
- Cisco Unity standby redundancy was designed with the expectation that the primary server would
 generally be the active server. The secondary server must be used as the active server only for brief
 periods. The problem with the primary server must be resolved promptly, and the primary server
 must be made the active server again at the earliest opportunity.

• When separating the Cisco Unity primary or secondary servers from one another or from other servers by a firewall, the applicable TCP and UDP ports must be open in the firewall. For details on the TCP/UDP ports used by Cisco Unity and other servers, refer to the "IP Communications Required by Cisco Unity" chapter in the Security Guide for Cisco Unity 5.x at http://www.cisco.com/en/US/products/sw/voicesw/ps2237/prod_maintenance_guides_list.html.

Requirements for Cisco Unity Phone View

- Cisco Unity integrated with a supported version of Cisco Unified Communications Manager. For compatibility information, refer to SCCP Compatibility Matrix: Cisco Unity, the Cisco Unity-CM TSP, Cisco Unified Communications Manager, and Cisco Unified Communications Manager Express or SIP Trunk Compatibility Matrix: Cisco Unity and Cisco Unified Communications Manager at
 - http://www.cisco.com/en/US/products/sw/voicesw/ps2237/products_device_support_tables_list.ht ml.
- A supported Cisco Unified IP Phone model, with the supported Cisco Unified Communications
 Manager version firmware installed. For supported phone models, refer to the "Supported Phone
 Models for Use with Cisco Unity Phone View" section in Supported Hardware and Software, and
 Support Policies for Cisco Unity Release 5.x at
 http://www.cisco.com/en/US/products/sw/voicesw/ps2237/prod_installation_guides_list.html.

Requirements for Using 97 to 144 Voice Messaging Ports

- A supported platform. Refer to the *Cisco Unity Supported Platforms List* at http://www.cisco.com/en/US/products/sw/voicesw/ps2237/products_data_sheets_list.html.
- Windows Server 2003.
- Cisco Unified Communications Manager integration (either SCCP or SIP trunk).
- PIMG or TIMG integration.

Requirements for the Cisco Unity Hospitality and Property Management System Integration

- A Percipia Networks Transient Communications Engine (PTCE) server with software version 4.0.4 or later.
- Cisco Unity is installed in an Exchange 2003 or Exchange 2000 environment. Exchange 2007 is not supported.
- Cisco Unity is installed in a Windows 2003 or Windows 2000 domain.
- Cisco Unity is installed on a server that meets Cisco Unity specifications. Note that the maximum number of voice messaging users supported on each server platform includes all regular subscribers and hotel guests. Refer to the *Cisco Unity Supported Platforms List* at http://www.cisco.com/en/US/products/sw/voicesw/ps2237/products_data_sheets_list.html.

Note that the Cisco Unity Hospitality feature is not supported for use with Cisco Unity failover.

Characteristics of Cisco Unity Configurations

See the applicable section:

- Cisco Unity Unified Messaging Configuration, page 24
- Cisco Unity Voice Messaging Configuration, page 24

Cisco Unity Unified Messaging Configuration

The Cisco Unity Unified Messaging configuration has the following characteristics:

- The Cisco Unity server handles only voice messages. Voice and e-mail messages are stored on the message store servers.
- The Cisco Unity server is connected to the network, so it has access to the message store, the directory, and network utilities, such as virus checking and backup.
- Subscribers check messages:
 - With Domino, by using the phone or an e-mail client.
 - With Exchange, by using the phone, the Cisco Unity Inbox, or an e-mail client. (The Cisco Unity Inbox is accessed through the Cisco Personal Communications Assistant, or Cisco PCA.)
- Cisco Unity administration may be performed over the network.
- Subscribers have access to the Cisco Unity Assistant through the Cisco PCA.
- Voice-mail and e-mail attributes on subscriber accounts may be administered from a single location by using the Cisco Unity Administrator.

Cisco requires the following certification for anyone installing a Cisco Unity server as a Unified Messaging server:

With Domino	Certified Lotus Professional System Administrator	
With Exchange	Microsoft Certified System Engineer	

Cisco Unity Voice Messaging Configuration

The Cisco Unity Voice Messaging configuration has the following characteristics:

- The Cisco Unity server handles only voice messages.
- When the Cisco Unity server is connected to the network:
 - Cisco Unity administration can be performed over the network.
 - Subscribers have access to the Cisco Unity Assistant through the Cisco Personal Communications Assistant (PCA).
 - The server has access to network utilities, such as virus checking and backup, and to the message store and the directory, if they are installed on a separate server.
 - Cisco Unity can be integrated with Cisco Unified Communications Manager and Cisco SIP Proxy Server.

 Cisco Unity can be integrated with a circuit-switched phone system through Media Gateway units (PIMG or TIMG).

(For information on when the Cisco Unity server must be connected to the network, see the "Network Requirements" section on page 12.)

- Subscribers check messages:
 - With Domino, by using the phone.
 - With Exchange, by using the phone or from the Cisco Unity Inbox (accessed through the Cisco PCA).
- E-mail attributes, if any, and voice-mail attributes on subscriber accounts must be administered separately.

Cisco requires that anyone installing a Cisco Unity for Domino server in a Voice Messaging configuration have Certified Lotus Professional System Administrator certification.

CCVP, the Cisco logo, and Welcome to the Human Network are trademarks of Cisco Systems, Inc.; Changing the Way We Work, Live, Play, and Learn is a service mark of Cisco Systems, Inc.; and Access Registrar, Aironet, Catalyst, CCDA, CCDP, CCIE, CCIA, CCNP, CCSP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IOS, Cisco Press, Cisco Systems, Cisco Systems Capital, the Cisco Systems logo, Cisco Unity, Enterprise/Solver, EtherChannel, EtherFast, EtherSwitch, Fast Step, Follow Me Browsing, FormShare, GigaDrive, HomeLink, Internet Quotient, IOS, PlyTV, iQ Expertise, the iQ logo, iQ Net Readiness Scorecard, iQuick Study, LightStream, Linksys, MeetingPlace, MGX, Networkers, Networking Academy, Network Registrar, PIX, ProConnect, ScriptShare, SMARTnet, StackWise, The Fastest Way to Increase Your Internet Quotient, and TransPath are registered trademarks of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries.

All other trademarks mentioned in this document or Website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (0711R)

Any Internet Protocol (IP) addresses used in this document are not intended to be actual addresses. Any examples, command display output, and figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses in illustrative content is unintentional and coincidental.

© 2008 Cisco Systems, Inc. All rights reserved.

Characteristics of Cisco Unity Configurations