

Cisco Prime NCS Ordering and Licensing

Updated: May 2011

NCS - Ordering

Step 1

- | | |
|--------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Order Software + License | <ol style="list-style-type: none">1. Select L-NCS-1.0-K92. Select the part to match count of devices managed3. Deploy as a Virtual Appliance |
|--------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

Step 2

- | | |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------|
| Purchase Appliance (If Desired) | <ol style="list-style-type: none">1. If deploying on physical appliance, purchase "PRIME-NCS-APL-K9" |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------|

Step 3

- | | |
|-------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| FUTURE: To Add Capacity | <ol style="list-style-type: none">1. Select "L-NCS-1.0-ADD-K9"2. Select the part to match the count of devices added3. Stack these on top of existing licenses |
|-------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

Step 4

- | | |
|----------|--------------------------------------------------------------------------------------|
| Services | <ol style="list-style-type: none">1. Buy SAS and SMARTNet as necessary |
|----------|--------------------------------------------------------------------------------------|

NCS – Appliance and SOFTWARE SKUs

Part Number	Description	List Price	Delivery Model
PRIME-NCS-APL-K9	Cisco Prime Appliance	\$14,995	PHYSICAL
L-NCS-1.0-K9	NCS Software & Device Count Licenses Family		
L-NCS-1.0-50	Cisco Prime NCS SOFTWARE AND License to manage 50 devices	\$5,295	EDELIVERY
L-NCS-1.0-100	Cisco Prime NCS SOFTWARE AND License to manage 100 devices	\$8,995	EDELIVERY
L-NCS-1.0-500	Cisco Prime NCS SOFTWARE AND License to manage 500 devices	\$37,000	EDELIVERY
L-NCS-1.0-1K	Cisco Prime NCS SOFTWARE AND License to manage 1000 devices	\$69,000	EDELIVERY
L-NCS-1.0-2.5K	Cisco Prime NCS SOFTWARE AND License to manage 2500 devices	\$139,000	EDELIVERY
L-NCS-1.0-5K	Cisco Prime NCS SOFTWARE AND License to manage 5000 devices	\$199,000	EDELIVERY
L-NCS-1.0-10K	Cisco Prime NCS SOFTWARE AND License to manage 10000 devices	\$299,000	EDELIVERY

NCS – ADD-ON ONLY License SKUs

Part Number	Description	List Price	Delivery Model
L-NCS-1.0-ADD-K9	NCS Add-On Licenses Family		
L-NCS-1.0-50-ADD	Cisco Prime NCS ADD-ON License for 50 devices	\$5,295	EDELIVERY
L-NCS-1.0-100-ADD	Cisco Prime NCS ADD-ON License for 100 devices	\$8,995	EDELIVERY
L-NCS-1.0-500-ADD	Cisco Prime NCS ADD-ON License for 500 devices	\$37,000	EDELIVERY
L-NCS-1.0-1K-ADD	Cisco Prime NCS ADD-ON License for 1000 devices	\$69,000	EDELIVERY
L-NCS-1.0-2.5K-ADD	Cisco Prime NCS ADD-ON License for 2500 devices	\$139,000	EDELIVERY
L-NCS-1.0-5K-ADD	Cisco Prime NCS ADD-ON License for 5000 devices	\$199,000	EDELIVERY
L-NCS-1.0-10K-ADD	Cisco Prime NCS ADD-ON License for 10000 devices	\$299,000	EDELIVERY

NCS – Appliance Spares

Part Number	Description	Delivery Model
AIR-SRVR-146GB-HD=	Field replaceable 146GB HDD	N/A
AIR-SRVR-PWR=	Field replaceable power supply	N/A
AIR-SRVR-URMK=	Universal Rack Mount Rail Kit	N/A

NCS Demo Licenses

Part Number	Description	Delivery Model
NCS-DEMO-10	EXTERNAL (Self-Service): NCS Demo License for 10 Devices, and 30 Days	Electronic
NCS-DEMO-100	INTERNAL (BU Provided): NCS Demo License for 100 Devices, and 30, 60 or 90 Days*	Electronic
NCS-DEMO-1000	INTERNAL (BU Provided): NCS Demo License for 1000 Devices, and 30, 60 or 90 Days*	Electronic

**BU can provide custom duration upon request, and after validating business need*

NCS Licensing Structure

- Definition of a “Device”: A switch, or an Access Point
 - The distribution of the license count between device types is up to the customer
 - Each switch in a stack counts as one device
- Tiers
 - NCS Licenses have one single tier
 - All features available in one single tier
- Levels
 - NCS Device Count Licenses can be purchased in quantities of: 50, 100, 500, 1000, 2500, 5000, and 10000 devices
 - Must have one and only one of L-NCS-1.0-K9 before stacking “ADD-ON” licenses
 - All ADD-ON Licenses are additive and can be stacked on top of each other.
 - Partial fulfillment not supported*

Where do I find my UDI or V-UDI?

- Using the GUI:

- Login to NCS, and go to “License Center” under “Administration” Menu

- The UDI or V-UDI is displayed on the “Summary” page

- Using the CLI:

- Use the command “show udi”

Re-hosting a License


- A License can be re-hosted when deploying a new appliance, and the old license needs to be re-provisioned
- To re-host a license
 - Email licensing@cisco.com
 - Provide relevant order data to validate purchase
 - Provide new UDI or V-UDI
 - New license is sent via email
- A License can only be re-hosted up to a maximum of 25 times

WCS to NCS Migration

WCS to NCS –Migration

Migration Steps:

- Buy WCS to NCS Migration SKU: **WCS-NCS1.0-MIGRATE (List \$1,995)**
 - Download, and Install NCS (Virtual Appliance: must meet hardware requirements)
 - WCS to NCS Migration SKU includes a BONUS 25 device count license
- Purchase NCS Hardware Appliance (optional, needed only if moving to appliance): PRIME-NCS-APL-K9 (**List \$14,995**)
- Apply migrated licenses from WCS, to NCS

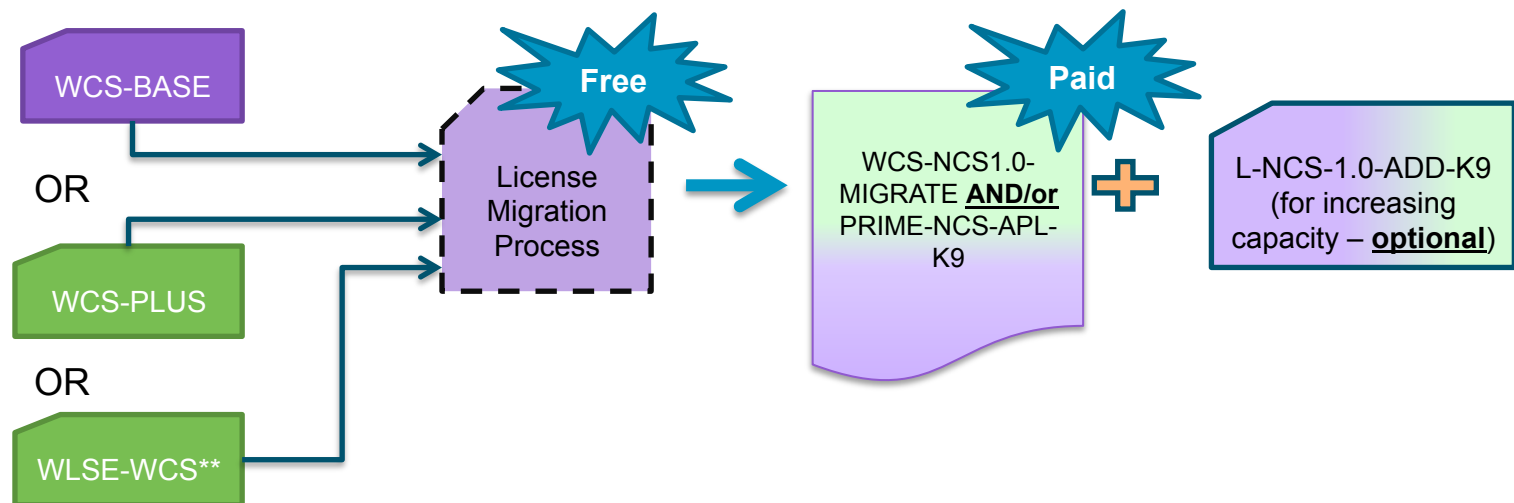

*Customers must purchase WCS-NCS1.0-MIGRATE or PRIME-NCS-APL-K9 before applying migrated licenses

**Customers running WCS on WLSE need to be on WCS 7.0.164.0 or higher to be able to migrate licenses

WCS to NCS – License Migration

- Follow the steps below to obtain the XML file from your existing WCS deployment

Please use Mozilla Firefox, Microsoft Internet Explorer or Google Chrome for the following steps

Login to the WCS server (version 7.0.164.0 or higher) and Proceed to "Administration -> License Center"

Use the left-hand navigation, and select the "File" option

Select "WCS Files" Page, and then use the "Export" option

An XML file will be generated - save this file on your local machine

- Upload the XML file to the Cisco.com migration web page, at:
www.cisco.com/go/license

Scroll down to the "Migration" section and Look for the "Register for Upgrade/Migrate License" option

Select the "Network Control System" from the drop-down menu, and click on proceed

Enter your "Product ID" and "Serial Number"

Open the XML file you saved in a text editor, and copy the contents of the file - Paste the copied content in to the text box.

Accept the EULA, Verify your contact information and Click on "Continue"

The migration web page will generate the new license which will be emailed to you.

- Apply the new license to Cisco NCS

WCS and NCS – Tier Comparison

Cisco Wireless Control Systems (WCS)

Base

1. Core Network Management
2. Ability to connect Spectrum Expert with WCS-ADV-K9
3. Example: WCS-APBASE-* or WCS-WLSE-APB-*

Plus (Includes all Base Functionality)

1. Single Client Location (without MSE)
2. Services Management (MSE Services: wIPS, Context-Aware, CleanAir)
3. High Availability
4. Spectrum Expert License Included
5. Example: WCS-PLUS-* or WCS-WLSE-PLUS-*

Cisco Prime Network Control System (NCS)

Single-tier License (Includes all WCS BASE and PLUS Functionality)

1. One Single Tier, Includes all features
 1. Core Network Management
 2. Single Client Location (without MSE)
 3. Services Management (ISE integration and MSE Services: wIPS, Context-Aware, CleanAir)
 4. High Availability
 5. Spectrum Expert License Included
 6. Example: L-NCS-1.0-K9

*A single WCS Server can be deployed in BASE or PLUS tier only.
Mixed Tier Licensing is not supported*

NCS on WLSE Appliance

**Running NCS on a
WLSE is Not
Supported**



CISCO